

INTELLIGENT HIGH SPEED DOME MANUAL



**Before installation and use this speed dome, please read the manual
and keep this manual for future use**

INDEX

1. Product Introduction.....	2
1.1 Safety Attention Notes	2
1.2 Cautions	2
1.3 Function.....	2
1.4 Speed Dome Dimension Chart.....	3
1.5 Specification	4
1.6 Packing and Accessories	5
2. Speed dome Setting	5
2.1 Switch Position setting	5
2.2 Baud Rate Setting	5
2.3 Communication protocol Setting	5
2.4 Address Setting.....	6
2.5 Alarm Connection	7
2.6 Dome camera Installation and Connection.....	7-9
3. OSD Setting	10
3.1 OSD Index.....	11
3.2 Operation	12
3.2.1 Selecting aim item.....	12
3.2.2 Parameter Setting	12
3.3 System Setting	12
3.3.1 System Display Setting	12
3.3.2 System State Setting	12
A: Power up Act	13
B:Leisure Act.....	13
C:Leisure Time	13
D:Reset Pasword.....	13
E: Default Restoration	13
3.4 Camera Setting	13
3.5 Speed dome function setting.....	13
3.5.1 Scan setup	13
A:Pattern Scan setting	14
B: Tour Scan setting.....	14
C: 360 °Scan Setting	15
D:Limit Scan setting	15
3.5.2 Auto Flip	15
3.5.3 Home Place.....	15
3.6 Alarm Setup	15-16
3.7 Preset Position title setting.....	16
3.8 Preset positon shortcut Key.....	16
4. Exception handling table.....	16-17
5. Housing cleaning	17
6. Speed dome Maintenance.....	17
Annex I: Sony camera menu	18

Annex II : CNB camera menu	19
Annex III: LG camera menu	19-20

1. Product Introduction

This series of products using the most stable high-performance digital DSP design, some of the main component is famous brand such as Motor-driver, zoom module , electronic slip ring . our speed dome has the perfect design and easy installation ,which is an inevitable trend for the high-tech products . It can quickly and accurately position and track the target, It can be no blind spot in the all-round goal of a 24-hour surveillance .

This product can be widely used in smart buildings, bank security, urban roads, airport terminals ect which can meet any of the diversification request for the square,

1.1 Safety Attention Notes

- A. Please read the instructions thoroughly before installing or operating the unit .
- B. Please follow the safety operating standard when installing
- C. Only professional and experienced staff can do the installation and maintenance work
- D. Use reliable tools, poor tools can cause danger
- E. Make sure the using environment meet requirements of the product
- F. Please check the strength and toughness of the installation base, the base must bear 4 times the total weight of speed dome and accessories.
- G. Please keep all packaging for future packaging and transportation.

1.2 Cautions


- A. Please do not install the speed dome in the inflammable and explosive area.
- B. Please do not put the speed dome in the unstable table or mounting bracket.
- C. Please prevent all liquids or other contaminating material from entering into the dome housing.
- D. Do not use the wrong power adapter , the speed dome power supply is AC24V.
- E. RS-485, blue wire for 485+ (A) , green wire for 485- (B)
- F. Please do not turn on the power before finishing installation
- G. Please do not open the speed dome or repair by yourself .
- H. Please do not clean the unit by Corrosive detergent .
- I. Avoid shooting very bright objects directly into the camera's CCD (such as the sun or light fittings)
- J. Please prevent over weight impact or shock
- K. Please read manual book thoroughly before installation.

1.3 Function


- Horizontal rotation speed 0.1-280°/s, Vertical rotation speed 0.1-240°/s
- 255 preset position some of them can set title.
- 2 Scan mode , 4 Pattern , 4 Tour .
- 7 CH Alarm in , 2CH Alarm out .
- RS485 , Pelco D ,P
- English OSD menu
- Leisure Act setting function
- Title ,coordinate ,Temperature , zoom display
- Aluminum Alloy , IP66 Waterproof housing

- Built-in temperature control system
- Outdoor and Indoor mounting
- Power supply : AC24V ,low consumption

1.4Speed Dome Dimension Chart

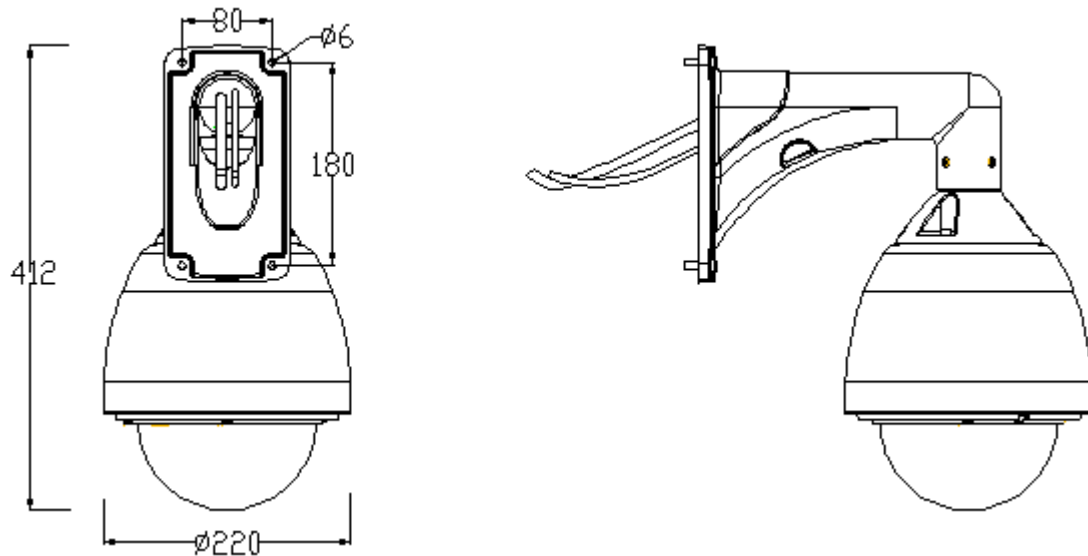

SPEED DOME ENTIRETY CHART

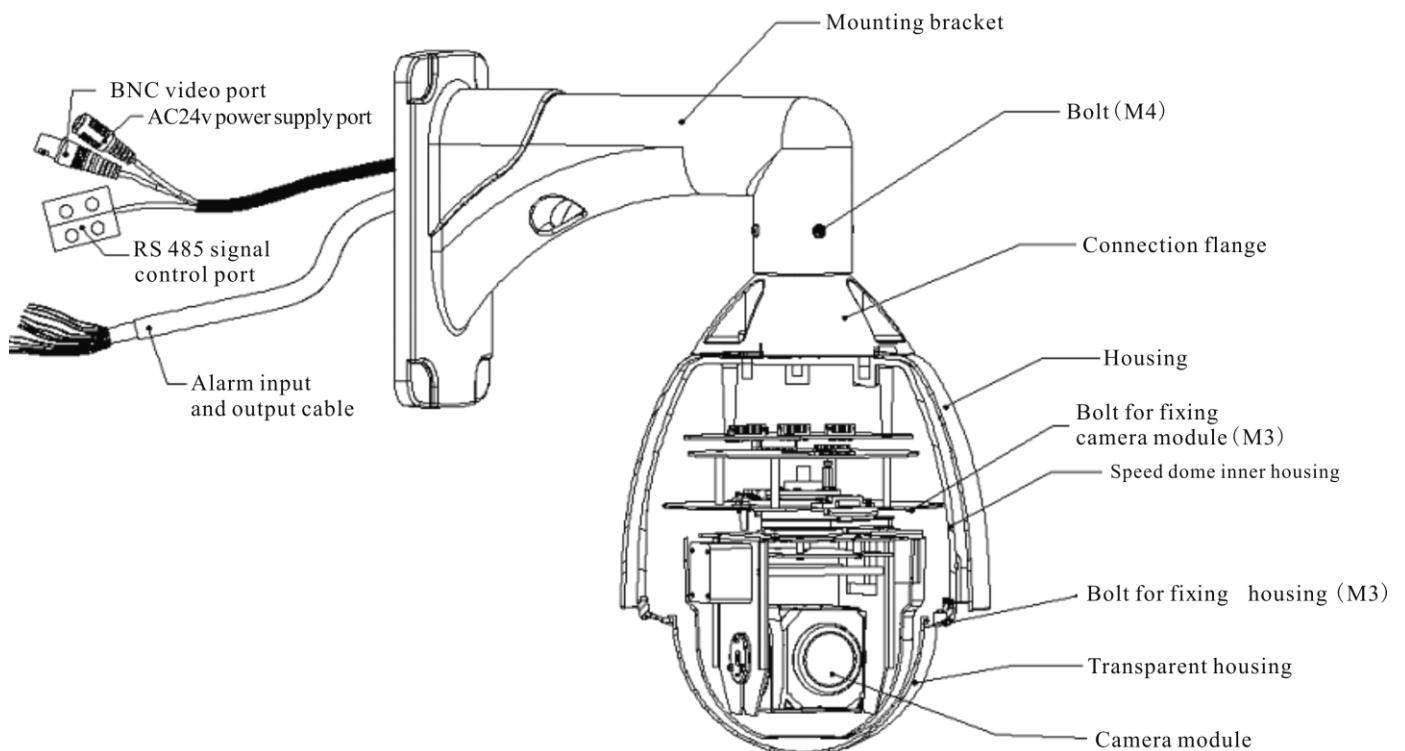

1.5 Specification

SPECIFICATION	
OSD MENU	ENGLISH
PRESET POSITION	255 PCS (SONY, HITACHI) ;64PCS (CNB, LG etc)
SCAN	AUTO SCAN ,LIMIT SCAN (Speed adjustable)
TOUR SCAN	4 TOUR ,16 Preset position per tour ,speed and dwell time can be adjustable
PATTERN SCAN	4 PATTERN , 15minutes recording for each pattern
ALARM	7 CH ALARM IN 2 CH ALARM OUT
PRESET RANGE	1--255
COMMUNICATION	RS-485
BAUD RATE	2400/4800/9600/19200,
COMMUNICATION PROTOCOL	Pelco-P/D
DWELL SETUP	Home place/Auto Scan/Tour scan/Pattern scan
Title Display	Display or hide the title, the title can be 16 letters , number MAX.
Camera ID	Display /Hide
ZOOM	Display
Mechanical parameters	
Horizontal rotation range	0° --360°
Horizontal rotation speed	0.1 ° --280 ° /s
Tilt rotation range	0.1---90° Auto Flip180°
Tilt rotation speed	0.1 ° --240 ° /s
Positioning accuracy	0.1°
Other Parameters	
Housing Material	Aluminum alloy
Waterproof standard	IP66
Operating Temperature	-20°C---65°C
Operating humidity	Less than 95%
POWER Supply	AC24V/3A
Mounting bracket	ceiling or wall mounting
Gross weight	4kg

1.6 Packing and Accessories

ID	Description	Quantity
1	Manual	1 piece
2	Guarantee card	1 piece
3	Passed card	1 piece
4	Glove	1 pair
5	Screwdriver	1 piece
6	Screw for camera	4 piece
7	Screw for Bracket	4 piece


2 . Speed dome Setting

2.1 Switch Position Setting

Take out the zoom module from speed dome you will see two groups switch --SW1 & SW2 at the bottom of the speed dome .



SW1

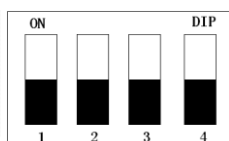


SW2

1--2 BAUD RATE 345 PROTOCOL
 0--0 2400 000 PELCOD/P
 1--0 4800
 0--1 9600
 1--1 19200

2.2 Baud Rate Setting

Speed dome can automatically recognize the Pelco-D or Pelco-P so only to set the baud rate and Address to make speed dome working . Baud rate is setted by 1&2 bits in SW1. The relative code switch setting below for reference, the default setting is 2400 bps

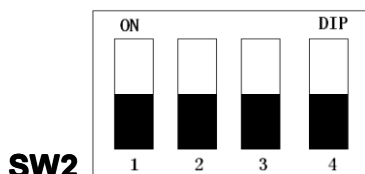

SW2

Baud Rate	Code bit on SW1	
	1	2
2400	OFF	OFF
4800	ON	OFF
9600	OFF	ON
19200	ON	ON


2.3 Communication protocol setting

The communication is setted by 3/4/5 bits in SW1.Speed dome can automatically recognize Pelco-D & Pelco-P , so the speed dome can work without setting communication protocol. The default setting is Pelco-D .

2.4 Address Setting

The bits in SW2 are used to set Dome address . (see following figure)

SW1

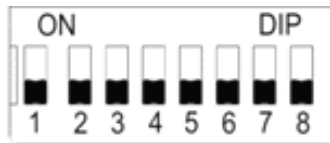


Address	CODE BIT SETTING							
	1	2	3	4	5	6	7	8
0	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
2	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
3	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
4	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
5	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
6	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
7	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
8	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
9	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
10	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF
11	ON	ON	OFF	ON	OFF	OFF	OFF	OFF
12	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
.....								
255	ON	ON	ON	ON	ON	ON	ON	ON

If using other controller to control speed dome, The communication protocol(speed dome recognize itself) baud rate and dome address should be setted correctly , Some times should be increase 1 or decrease 1 on the address code because of different address code from different factory . eg , dome address is 2, then have to set the address code as 3 on the DVR , then can use the DVR to control the speed dome properly .

2.5 Alarm connection

This speed dome can connect 8 CH alarm input and 2 CH output.

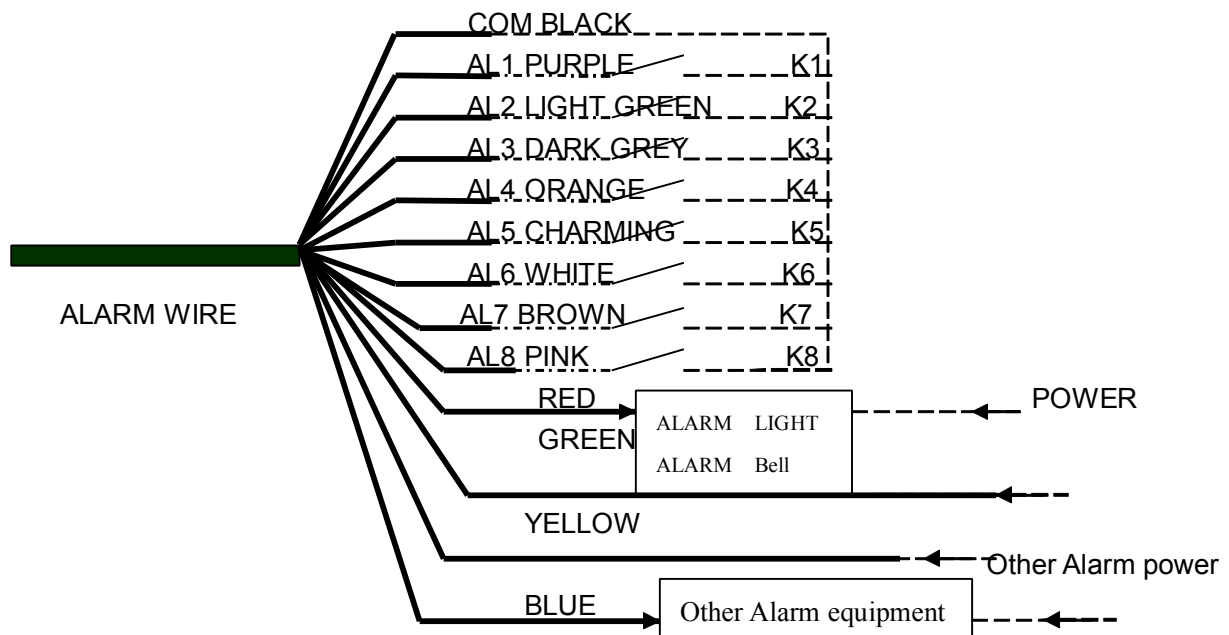

Remark : Alarm output switch value should be on, k1-k8 is switch value signal for outside

2.6. Dome camera Installation and connection :

2.6.1 Caution Before Installation:

1. The installation should be operated by the engineers or a qualified CCTV expert.
2. The correct connection way please check the installation pictures and installation specification
3. Please do wear glove before installation .Do not touch the speed dome and shell directly with metal ,hardware or hand to avoid scratching the speed dome housing.
4. Please lock the security wire when installing the transparent dome to avoid the unexpected scratch.
5. Please clean the transparent dome cover with soft paper or cloth after the installation .

2.6.2 The request of installation


Please check the accessories are complete or not after open the package .

Please check the application place and mounting way match the camera 's requirement.

The installation should be operated by CCTV expert obey the instructions in case of causing a trouble

Please do use the proper tools, such as the screwdriver .

Take out the camera module from the upper housing, check the address code right or not and then press the upper housing and lock the four M3X14 screw on the bottom board .

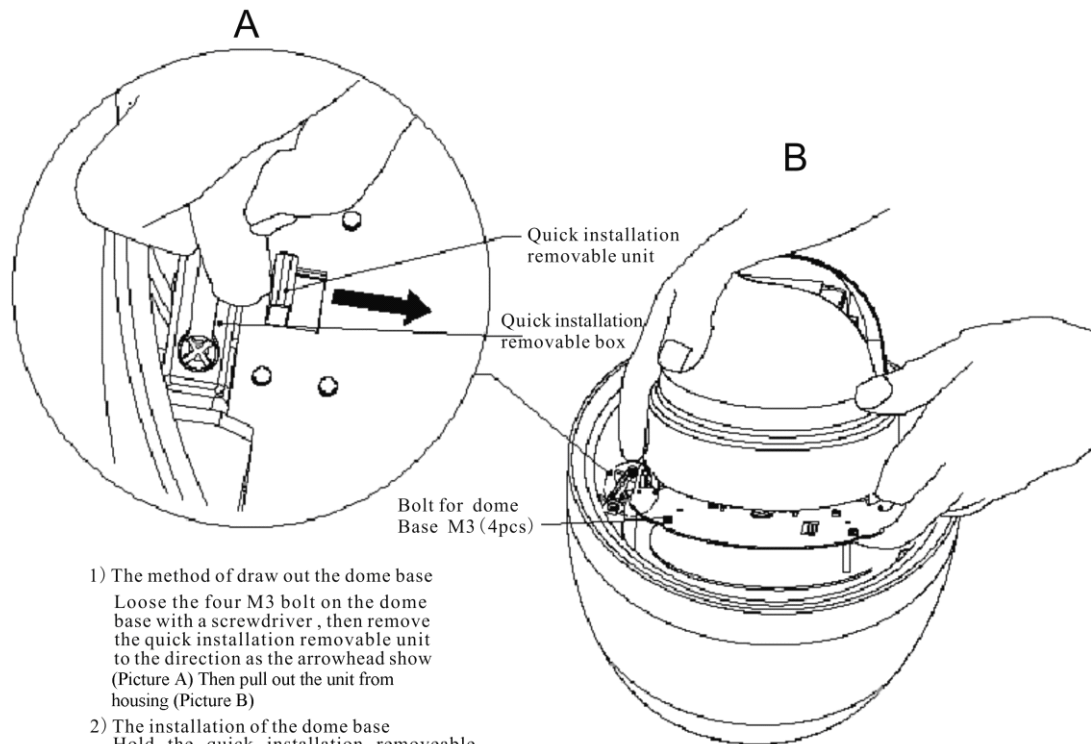Chart 1

- 1) The method of draw out the dome base
Loose the four M3 bolt on the dome base with a screwdriver , then remove the quick installation removable unit to the direction as the arrowhead show (Picture A) Then pull out the unit from housing (Picture B)
- 2) The installation of the dome base
Hold the quick installation removable unit and bolt hole on the dome base, take aim at the hole of the quick installation box and the fixed bolt hole ,then put down the dome base slowly , press the dome base lightly to make the quick installation removable unit slip into the quick installation box , screw down it with M3 bolt .

2.6.3 installation method


ATTN: Installation location must be strong and has no delaminating phenomenon.

Installation locations should bear 4 times weight of total weight (dome camera, mounting bracket and mounting base) to avoid accident caused by speed dome dropping.

The installation procedure

- A. Take out of the bracket from the package , draw out center site of the hole on the wall against bracket sample .

Chart2

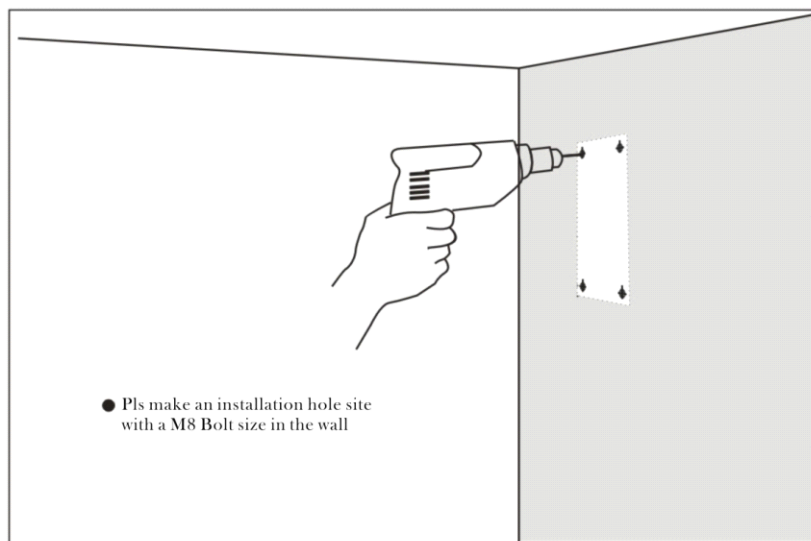

- B .Use drill to make 4 holes with the M8 size at the designated site. Screw in M6 bolt for mounting
- C.Put power, communication and video lines through bracket hole, leaving enough line length maneuverability, then put the bracket to the housing , lock the four M3X5 screws ,like chart 3 and chart 4
- D.Fix the bracket to the wall with 4 bolts and mounting tray .
- E. Take out the transparent dome cover from the package, lock the bracket bottom with safety wire ,like chart 4

Chart3


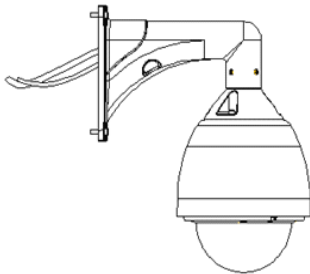



Chart 4

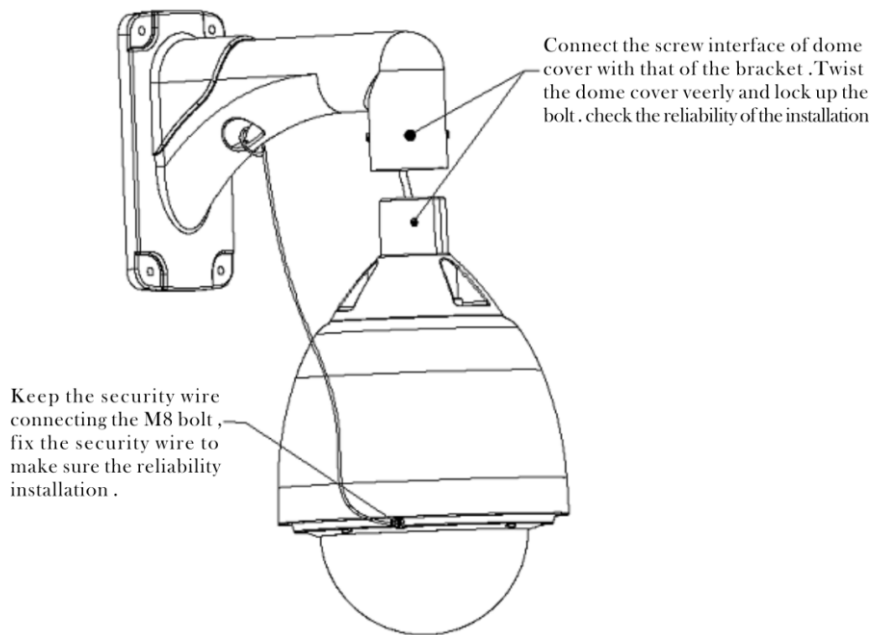

F .Fix the upper housing like chart 5

G. Clean the dirt of the transparent dome cover after the installation

Chart 5

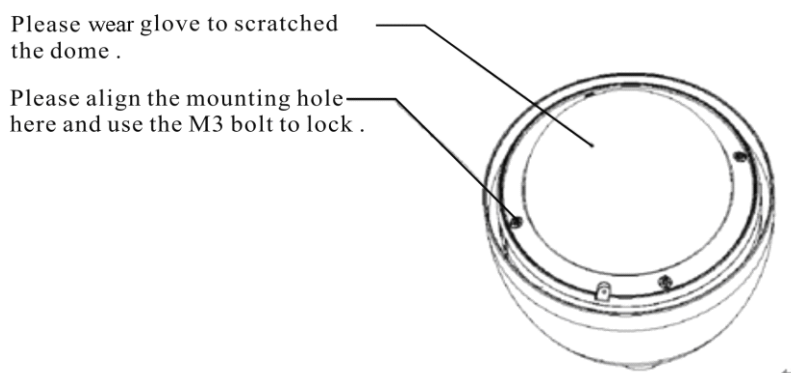

Wire connecting

Connect BNC video interface with video wire (BNC). Connect power supply line with set power line (AC24V3A).Connect RS485 control line with speed dome RS485 control line .

Should not connect positive and negative polarity of RS485 contrarily. A is RS485 positive polarity (blue), B is RS485 negative polarity (green). If connect RS485 contrarily, will not control outdoor speed dome camera.

Electricity

- Check the polarity of the plug and outlet, then check all connecting wires, if no problem then power on . Now speed dome enter self-inspection, first make a horizontal 360° and tilt 90° rotation , on the same time each inspection information will show on the monitor such as Dome ID, Baud rate, Camera . After the dome finish self-inspection , the dome is ready to be controlled .

**3.OSD setting**


When the power of the speed dome is on, it will show the speed dome camera basic information :such as protocol ,baud rate , address code , after self-inspection all the information will appear in 5 seconds (user can see the setting information below)

```
PROTOCOL:  PELCO-D
COMM:      2400, N , 8.1
ADDRESS :  001
FIRMWARE VER :1.19
REFERENCE IS OK
CAMERA IS OK
```

When above information appear after self-inspection, that means the speed dome can work well , it can be controlled well by Keyboard . Press 95+ preset to enter main menu , change menu by joystick up , down , left , right . the key function of the keyboard is as following table.

Serial number	keyboard Function	function of OSD
1	joystick up	The cursor shift up
2	joystick down	cursor shift down
3	joystick left	cursor shift left
4	joystick right	cursor shift right
5	Iris close/ Iris -	return
6	Iris open/ Iris +	confirmation

3.1 OSD Index

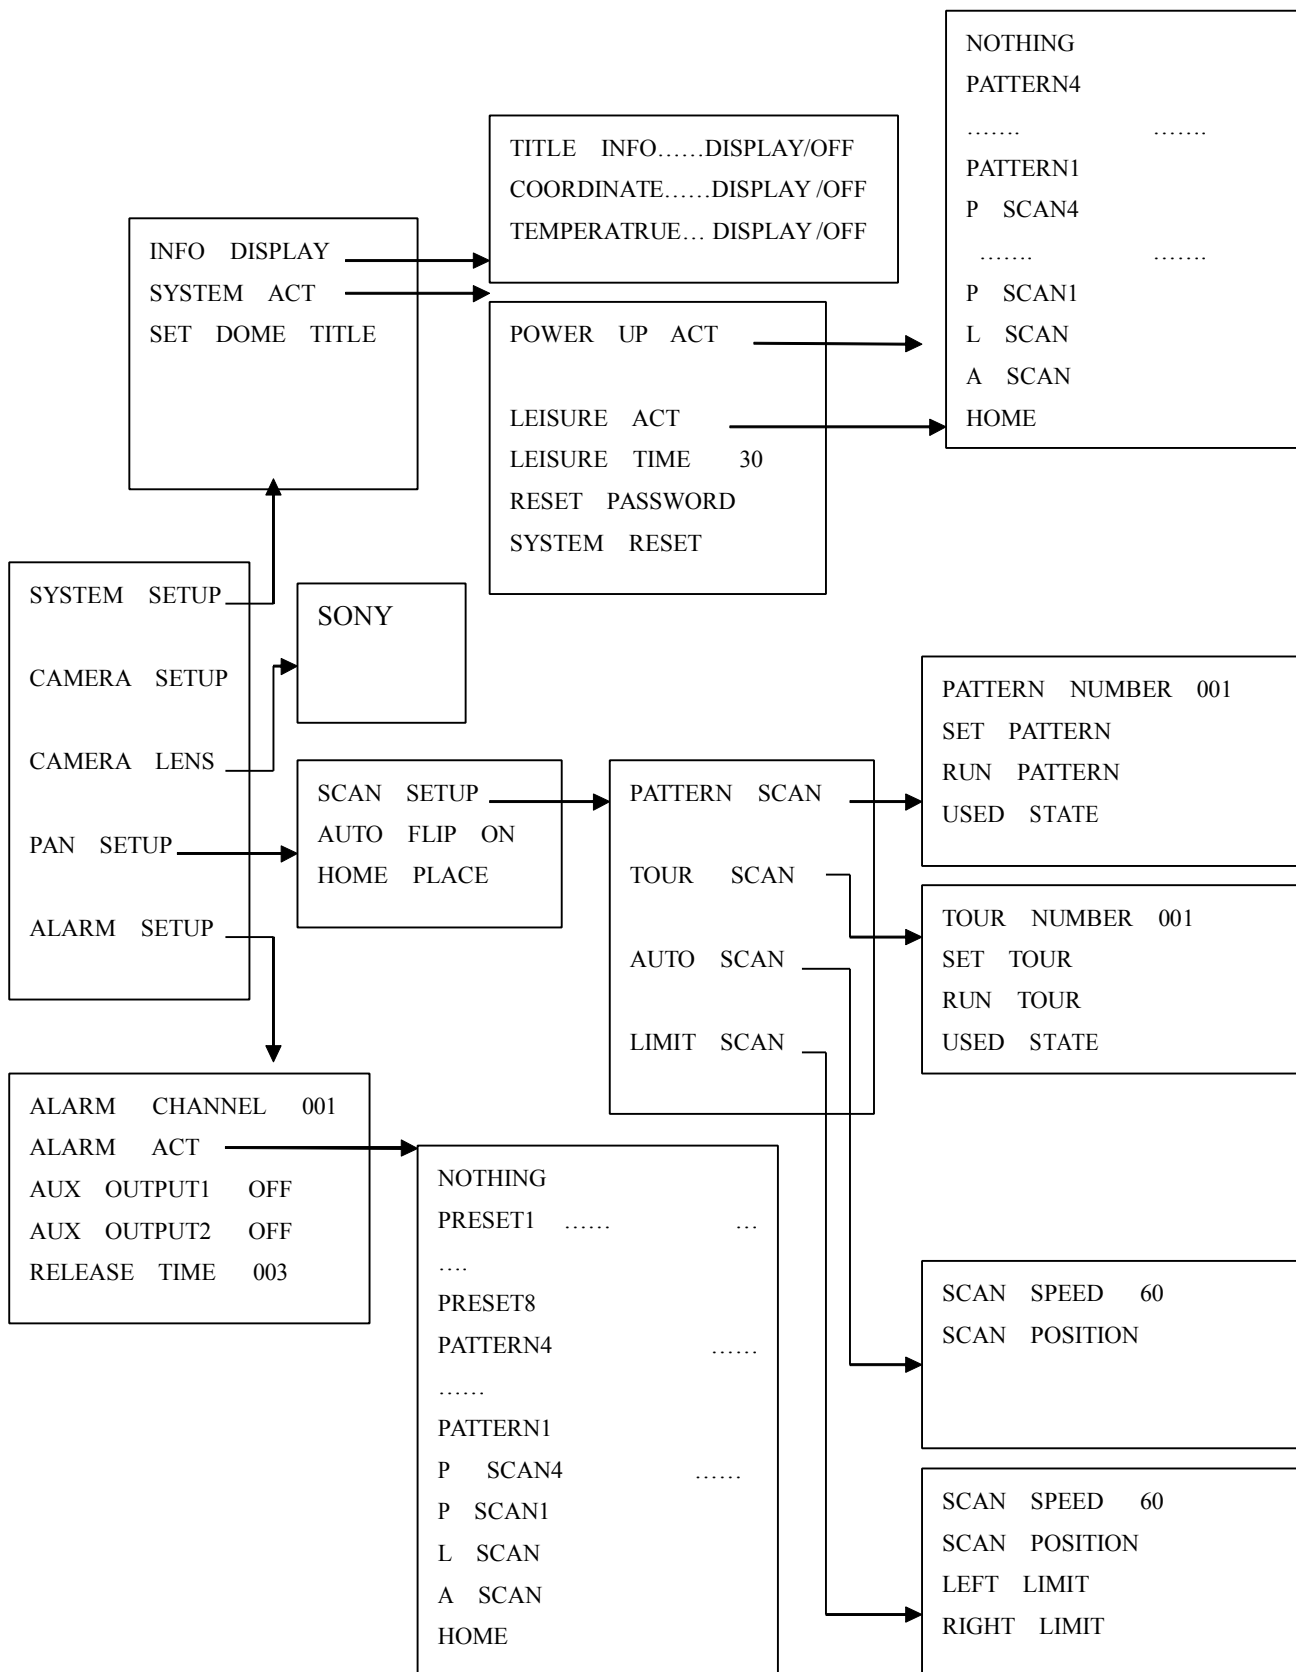

3.2 Operation

3.2.1 Selecting aim item

Press “64”+”+”or “95”+”+”to enter main menu like the chart: press Iris+ (or open key) to choose this item and enter next submenu

SYSTEM SETUP
CAMERA SETUP
PAN SETUP

3.2.2 Parameter setting

Use the joystick up or down to change the parameter, press Iris+ or open key , confirm the data and save it .press Iris- or close key , return back to the previous menu .

3.3 System Setting

Move the cursor on the SYSTEM SETUP by operating the joystick up an down , press the Iris+ Key , confirm and entering the submenu ,like the table:

INFO	DISPLAY	
SYSTEM	ACT	
SET	DOVE	TITLE

3.31 System Display Setting

Keep the cursor on the INFO DISPLAY by operating the joystick up an down ,press Iris+ or open key , confirm and entering the next submenu ,like the table:

TITLE	INFO.....DISPLAY /OFF
COORDINATE.....	DISPLAY /OFF
TEMPERATRUE.....	DISPLAY /OFF

You can choose by operate the joystick, Iris+ or open key to confirm

TITLE INFO DEFAULT SETTING :OFF

COORDINATE DEFAULT SETTING :OFF

TEMPERATRUE DEFAULT SETTING :OFF

Press Iris+ or open key on the key board to choose those above information, then choose on /off by operating the joystick up and down .Press Iris+ key or open key to save the parameter .Press Iris- or close key to return back to the previous menu .

3.3.2 System State Setting

Keep the cursor on the SYSTEM ACT by operating the joystick , press Iris+ or open key , confirm ,enter submenu ,such as :

POWER	UP	ACT
LEISURE	ACT	
LEISURE	TIME	30
RESET	PASSWORD	
SYSTEM	RESET	

A : Power up ACT :when the speed dome finished self-checking , customers can choose any action that the speed dome execute .Default setting is Nothing .

Choose the POWER UP ACT by wagging the joystick , press Iris+ or open key to confirm , then choose the action you want to set .There are Nothing ,Pattern 4 ,Pattern 3 ,Pattern 2 ,Pattern 1 ,Scan 4 , Scan 3 , Scan 2 ,Scan 1 , A-B LINE SCAN , 360°scan , Home to choose . Press Iris+ or open key to confirm and save the setting , press Iris- or close key , return to the previous menu .

B : Leisure Act: Speed dome in the setting time if no action ,in this situation ,need speed dome to executive one order, this means leisure action ,the default setting is nothing.

.Choose LEISURE ACT by wagging the joystick up and down , press Iris+ or open key to confirm , then choose the action you would like to do .there are Nothing ,PATTERN 4 , PATTERN 3 , PATTERN 3 , PATTERN 2 , PATTERN 1 , SCAN 4 , SCAN 3 , SCAN 2 , SCAN 1 , HOME to choose . Press iris+ or open key to confirm and save the setting .Press Iris- or close key to return back to the previous menu .

C: Leisure Time (Default setting is 30 second)

Choose LEISURE TIME by wagging the joystick up and down , press Iris+ or open key to confirm , then choose the leisure time(1-240s) by joystick again .press Iris+ or open key to confirm and save the setting . Press Iris- or close key , return to the previous menu .

D: Reset Password : Default setting :1111

Choose PRESET PASSWORD by wagging the joystick up and down , press Iris+ or open key to confirm this item , then “ ? ” will display on the screen , then choose any number and letter input (input 0-9,a-z,A-Z,8 bits total) press Iris+ or open key to confirm and save this setting .

E: Default restoration

Choose SYSTEM RESET by operating the joystick up and down , press Iris+ or open key , confirm and set this item , then “ ? ” Will appear on the screen .input the speed dome password , then press Iris+ or open key to confirm , after 2 second , it will go back to default setting .

3.4 Camera Set Up

CAMERA SETUP menu is depended on the camera module , different camera module has different menu. The details please refer to the Annex I、 II.III

3.5 Speed dome function setting

Wag joystick up and down to choose “PAN SETUP”, press Iris+ key(or OPEN key),enter the next submenu, like the table:

SCAN	SETUP
AUTO	FLIP OFF
HOME	PLACE

3.5.1 Scan Setup

Wag joystick up and down, choose SCAN SETUP, press Iris key(or OPEN key),enter the next submenu ,like the table:

PATTERN	SCAN
TOUR	SCAN
AUTO	SCAN
LIMIT	SCAN

A: Pattern Scan Setting

Wag joystick up and down, choose PATTERN SCAN , press Iris+ key(or OPEN key)to confirm,then enter the next submenu ,like the table:

PATTERN NUMBER 001
SET PATTERN
RUN PATTERN
USED STATE

PATTERN NUMBER: Wag joystick up and down to set pattern number (001-004),this speed dome supports 4 patterns

SET PATTERN: Wag joystick down to choose this item ,press Iris+ key(or OPEN key)to confirm this item .Begin setting up pattern route by wagging joystick ,this speed dome can records 15minutes's(Max) route where the camera goes through ,then press "95"+ "PREVIEW" key to save this pattern and exit.

RUN PATTERN: Wag joystick down to choose this item, press Iris+ key (or OPEN key) to confirm this item,speed dome runs according to pattern route.

USED STATE: Wag joystick down to choose this item, press Iris+ key(or OPEN key)to confirm .Wagging joystick up and down to set up which pattern to be used .Then press Iris – (or CLOSE) to exit and go back to previous menu.

B: Tour Scan Setting

Wag joystick up and down ,choose TOUR SCAN ,press Iris+ key(or OPEN key) to confirm,enter the next submenu ,like the table:

TOUR NUMBER 001
SET TOUR
RUN TOUR
USED STATE

TOUR NUMBER : Choose this item ,press Iris+ key(or OPEN)to confirm, Wag joystick up and down to set tour scan group number (001-004),this speed dome supports 4 tour scan groups.

SET TOUR:

Choose this item ,press the Iris+ key(or the OPEN key) to confirm,wag joystick up and down to choose the item to enter ,and press Iris+ key(or the OPEN key) to confirm then set up the successive preset positions ,Max 16 preset positions(attention: function shortcut key can't be used to set up preset positions);The speed to each preset position is different ,classified into 50-128 level: Leisure time at each preset position can be different (1-240seconds).Like the following table:

ID	Preset	Speed	Time
1	001	120	002
2	002	120	005
3	003	120	005
4	004	120	005
5	005	120	005
6	000	120	005
7	000	120	005
8	000	120	005

ID	Preset	Speed	Time
9	000	120	005
10	000	120	005
11	000	120	005
12	000	120	005
13	000	120	005
14	000	120	005
15	000	120	005
16	000	120	005

RUN TOUR: Press Iris+ key (or OPEN key) to confirm run this tour group

USED STATE: Choose this item and Press Iris+ key(or OPEN key)to confirm ,wagging joystick up and down to choose which tour group to be used ,press Iris+ key(or OPEN key)to confirm ,then press Iris- key(or CLOSE key)to exit and return to the previous menu.

C: 360° Scan Setting

Wag joystick up and down to choose “AUTO SCAN” ,press Iris+ key(or OPEN key) to choose this item ,then enter submenu ,as follows :

SCAN	SPEED	60
SCAN	POSITION	

SCAN SPEED: Choose this item and press Iris+ key (or OPEN key) to confirm , wag joystick up and down to change scan speed(10-80level),the default setting is 60.

SCAN POSITION: Choose this item and press Iris+ key(or OPEN key) to confirm ,use control keyboard to adjust the camera's pitch and zoom ,let speed dome record these cameras' action.

Suggestion :Don't let the camera 360° rotate continuously for a long time.

D: Limit Scan setting

Wagging joystick up and down to choose “LIMIT SCAN” , press Iris+(or OPEN key)to confirm this item ,enter submenu ,as follows:

SCAN	SPEED	60
SCAN	POSITION	
LEFT	LIMIT	
RIGHT	LIMIT	

SCAN SPEED : Choose this item ,press Iris+(or OPEN key)to confirm ,wag joystick up and down to change the scan speed of A point and B point(10-80level), the default is 60 level.

SCAN POSITION: Choose this item and press Iris+ key(or OPEN key) to confirm ,use control keyboard to adjust the camera's pitch and zoom ,let speed dome record these cameras' action.

LEFT LIMIT: Choose this item and press Iris+ key(or OPEN key) to confirm ,wag joystick left or right to set the left limit position ,A point (start point)

RIGHT LIMIT: Choose this item and press Iris+ key(or OPEN key) to confirm ,wag joystick left or right to set the right limit position ,B point(the ending point)

3.5.2 Auto Flip

Wag joystick up and down to choose AUTO FLIP item, press Iris+ key (or OPEN key) to confirm, Choose ON or OFF, make AUTO FLIP function open or close. The default setting is open.

3.5.3 Home Place

Wag joystick up and down to choose HOME PLACE, press Iris+ key (or OPEN key) to confirm, Use control keyboard to set the guard location.

3.6 Alarm Setup

Go to the main menu of the speed dome, wag joystick up and down to choose ALARM SETUP, press Iris+ key (or OPEN key) to confirm this item ,enter the submenu ,as the chart:

ALARM	CHANNEL	001
ALARM	ACT	NOTHING
AUX	OUTPUT1	OFF
AUX	OUTPUT2	OFF
RELEASE	TIME	003

ALARM CHANNEL: Choose this item and press Iris+ key (or OPEN key) to confirm ,wag control joystick up and down to choose alarm channel(from 1 to 7 channel)

ALARM ACT :Choose this item and press Iris+ key (or OPEN key) to confirm ,wagging joystick to choose the alarm action, for example :NOTHING ,No. 1 preset position to No. 8 preset position , Limit scan ,The fourth pattern scan ,The first tour group scan,360 ° scan ,Home place and so on .The default setting is no alarm action .

AUX OUTPUT1: Choose this item and press Iris+ key (or OPEN key) to confirm ,wag the joystick up and down to choose alarm output switch(on or off)for the first alarm output ,the default setting is off.

AUX OUTPUT2: Choose this item and press Iris+ key (or OPEN key) to confirm ,wag the joystick up and down to choose alarm output switch(on or off)for the second alarm output ,the default setting is off .

RELEASE TIME : Alarm output time is postponed to a certain time, adjustable range is 1sec to 60sec.The default setting is 3 sec .

3.7 Preset position title setting

This speed dome supports the first 32 preset positions' title .When you set the first 32 preset positions' titles (1st-32nd) the left of the screen displays “?” cursor, wagging joystick up and down ,left and right to choose the character you want to input, Max 18 characters, then press Iris+ key (or OPEN key) to confirm and exit, continue to set next preset position's title setting.

3.8 Preset position shortcut Key

Using some shortcut keys to call preset positions can start some functions,

Preset positions	functions
33	Auto flip 180 °
34	Go back to zero position
96	Start number 1 pattern scan
64 or 95	Enter OSD
61or 97	Start NO. 1 tour scan
62 or 98	Start A-B Limit scan
63or 99	Start 360 degree auto scan

Remark : The above preset positions with some function , so cannot used to be preset position any more .

4. Exception handling table


Issue	Possible reason	Solution
Power on, no movement, no image, indicator light doesn't on	Power cable connects wrong	Connect again
	Power supply damaged	Replace
	protective tube is bad	replace
	power cable is connected bad	Check
Power on ,self check ,has image, can't control	the machine's address code or baud rate is wrong	Reset address code and baud rate
	protocol wrong	correct it
	Rs485 cable is connected wrong	check RS485 line
Can't check itself ,has image but with motor hoot	mechanical breakdown	check it and repair it
	dome camera leans	correct it
	power supply is not enough	replace it
image is not stable	video cable is not connected well	correct it
	Power is not enough	replace it
image is dim	Focus in manual state	Operate the machine or adjust any preset position to let it in auto focus state
	Dome cover is dirty	clean the dome cover
can't control the speed dome to rotate	speed dome's power is not enough	replace the power
	check the camera has matching resistor or not	install resistor for the fast dome camera
	the distance between control keyboard and speed dome is too far	Using twisted-pair RS485 line or overstriking RS485 cable
	non-standard operation	power off and restart

5. Housing cleaning

- A. To ensure clear image, users should clean the housing cover regularly .When clean it please wear glove to avoid being scratched, your sweat may erode the housing cover .
- B. Use dry cloth to clean the inside and outside of the housing cover .
- C. Please use neutral detergent to get rid of the solidity on the housing cover .


6. Speed dome Maintenance


1. Check speed dome power supply regularly to avoid plug is not in the socket.
2. Make sure voltage of the speed dome and monitor center is stable.
3. Mark the speed dome located in low position , remind unprofessional persons not to touch it .
4. Ask professional persons to manage all the monitor equipments, unprofessional staff are forbidden to operate the equipments.
5. Make monitor equipments power off at night if no person watch the equipment.
6. Clean the monitor equipments regularly keep maintain it well

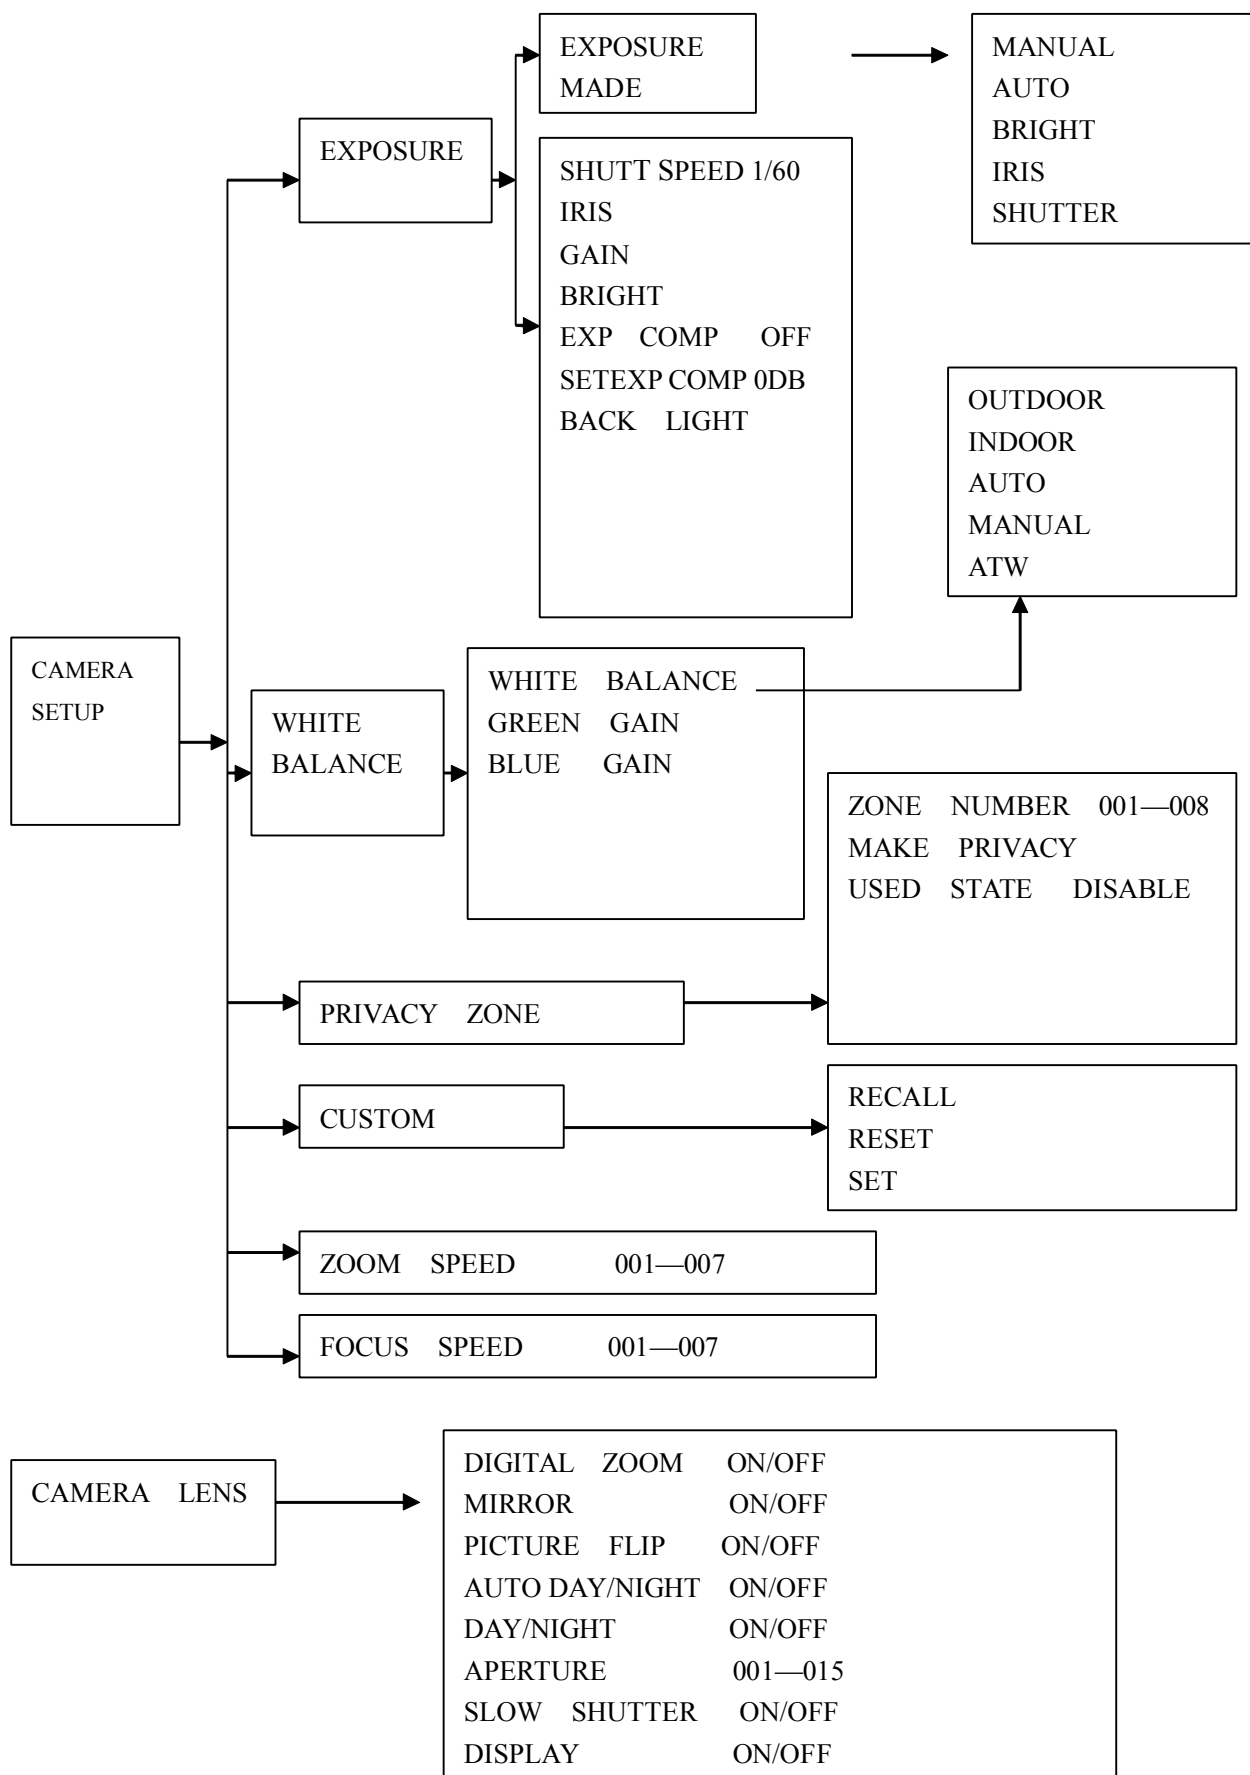Annex I: Sony camera menu

AnnexII: CNB camera menu

CAMERA SETUP :	1	BACKLIGHT	OFF/ON
	2	SLOW SHUTTER	FLD2-128/OFF
	3	DAY/NIGHT	OFF/ON /AUTO
	4	WB/CONTROL	PUSH/AUTO
	5	SHUTTER	AUTO
	6	CAMERA ID	000—255
	7	ZOOM START	x 001
	8	ZOOM STOP	x 220
	9	BRIGHTNESS	0—48
	10	SHARPNESS	0—15
	11	FOCUS	PUSH/AUTO
	12	INIT SET	ON/OFF

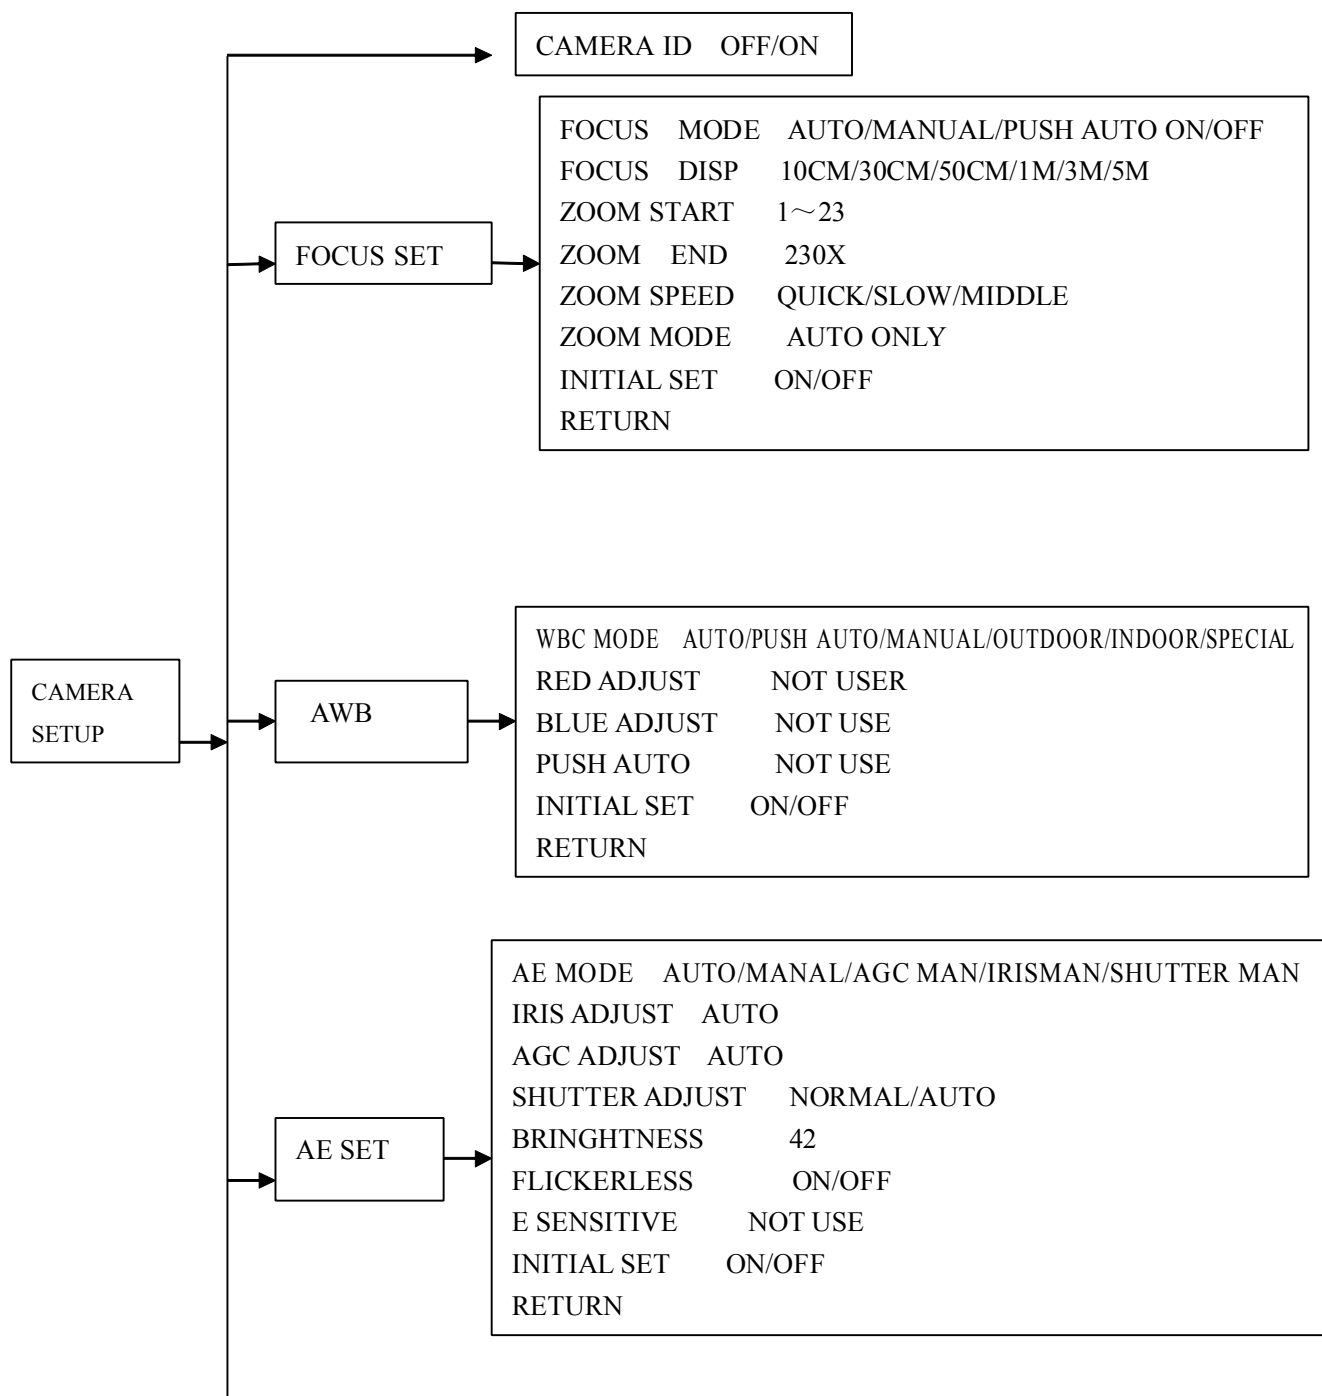Annex III: LG Camera Menu

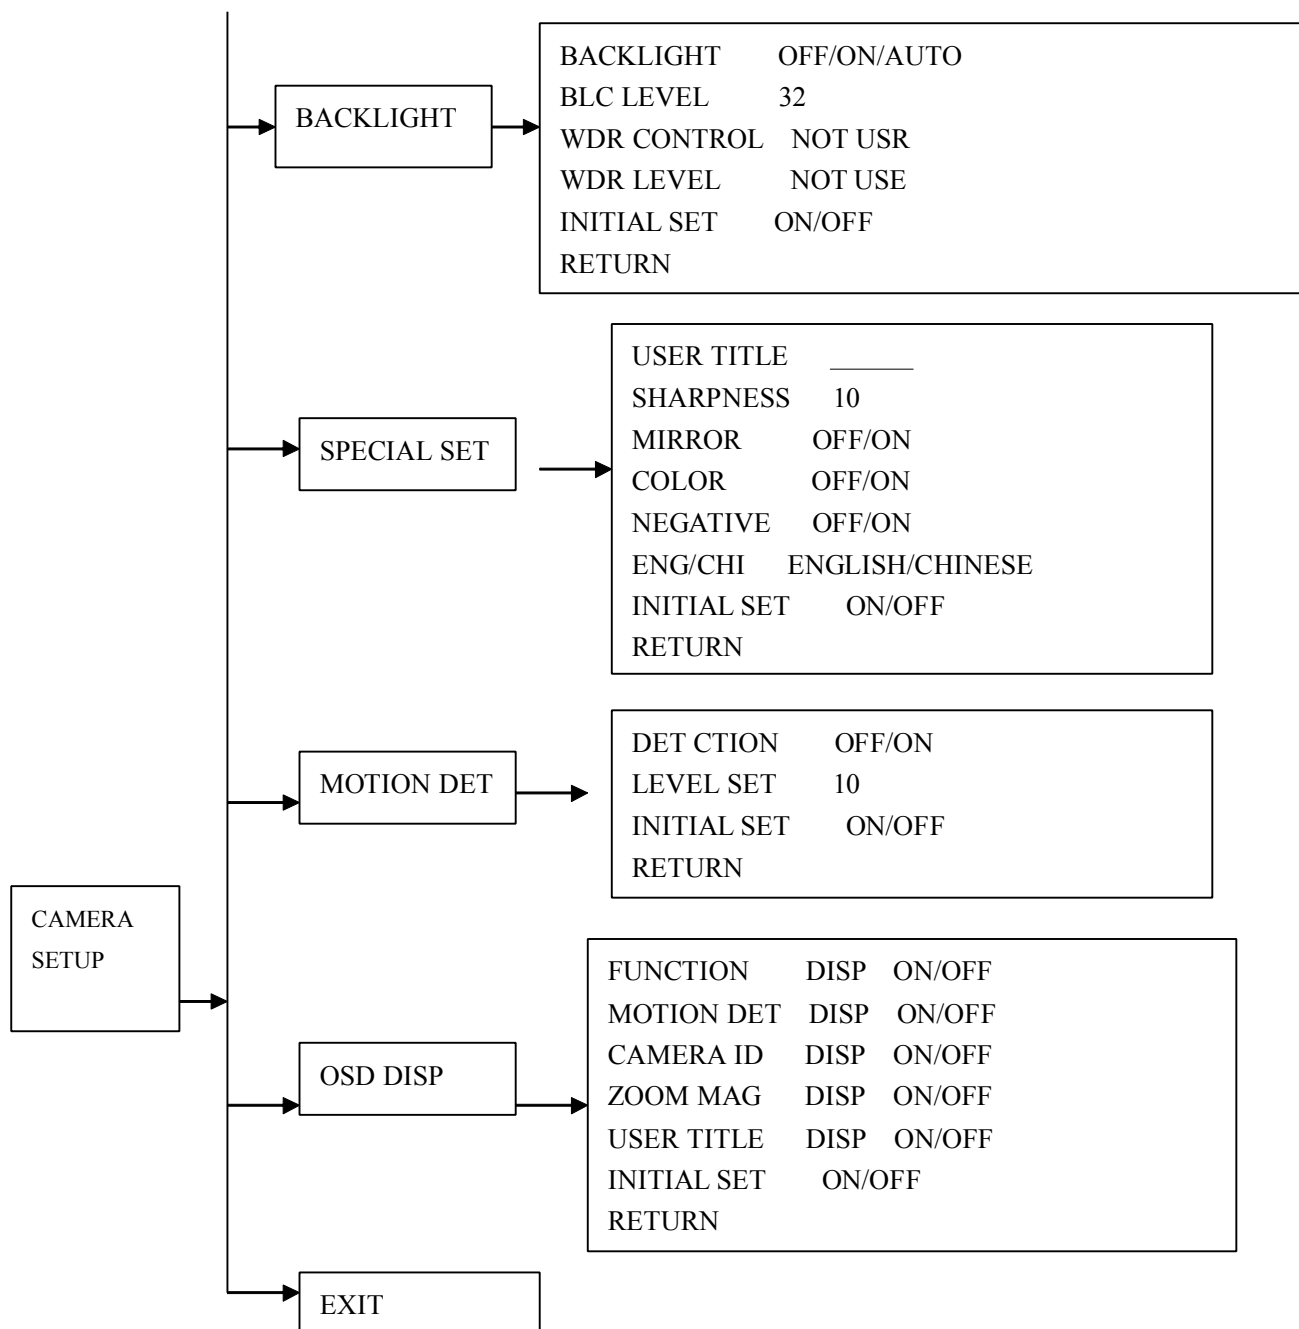

Remark : LG zoom module , use the keyboard to enter to the menu , the ‘FOCUS+’ and ‘FOCUS-’ can change the parameter , “ZOOM+” and “ZOOM-” can change the cursor position .