


Recovery NVR's default settings via IE browser

Connect the NVR to computer via RJ 45 network cable, then log in the NVR via IE browser.

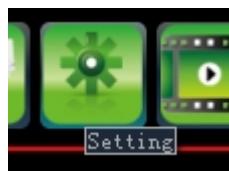

Choose "SYSTEM SETTING"

Then choose "SYSTEM", choose its sub menu of "RECOVERY CONFIGURATION", see the below image, choose the 3rd option of "DEFAULT",

The screenshot shows the 'Setting' menu in a web-based configuration interface. The left sidebar has a tree structure:

- Device
- Channel
- Network
- Alarm
- Account
- System
 - Device Log
 - Stream Info.
 - HDD Setting
 - Update
 - Auto Reboot
 - Recovery Configuration...

The 'Recovery Configuration...' option is currently selected. On the right side, there are three buttons:

- Export Configuration
- Import Configuration
- Default

The 'Default' button is also highlighted.

Then reboot the NVR, and log in it via displayer again to check if it can works normally.