

The use of Ping

Using Ping for checking if ip camera is normal when can't find ip address through our H-series search tool.

Step:


点击'开始'-运行-然后可以看到 `cmd`

1,click Start-running-and then type the letter "cmd"




2, 按“回车”, 然后可以看到如下图

Press 'Enter' button,then you will see as follows:

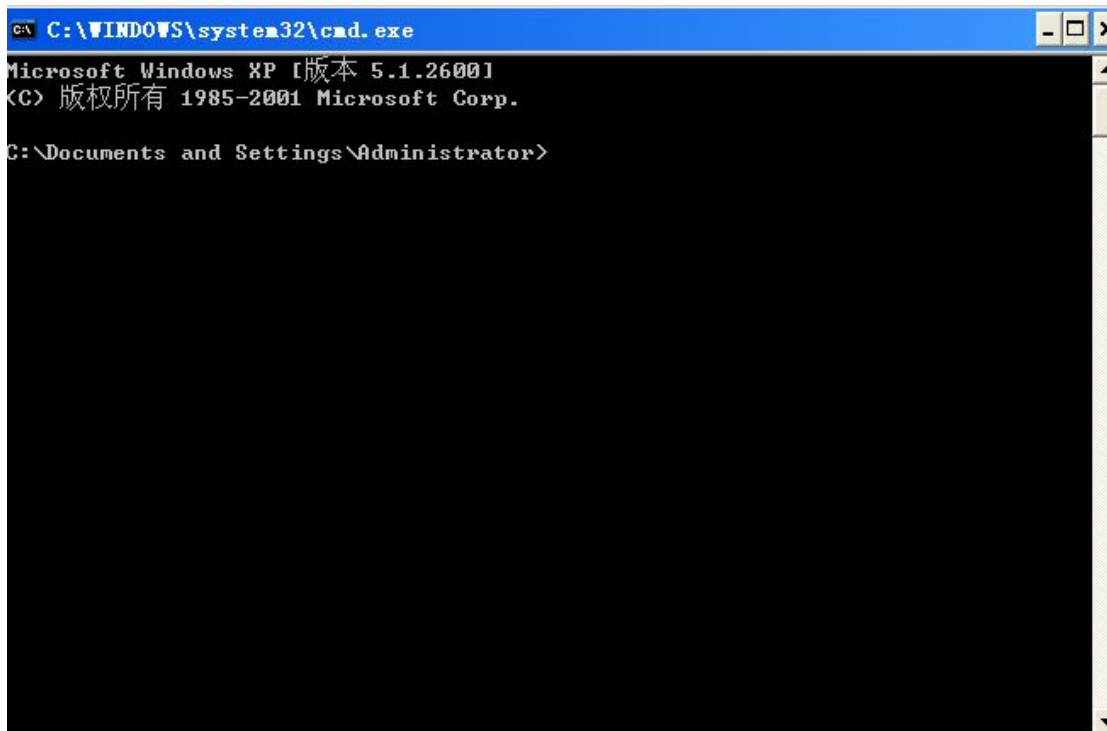

3, 输入摄像机 IP 默认地址, 按回车键.

Fill in the default ip address of the camera, then press 'Enter'

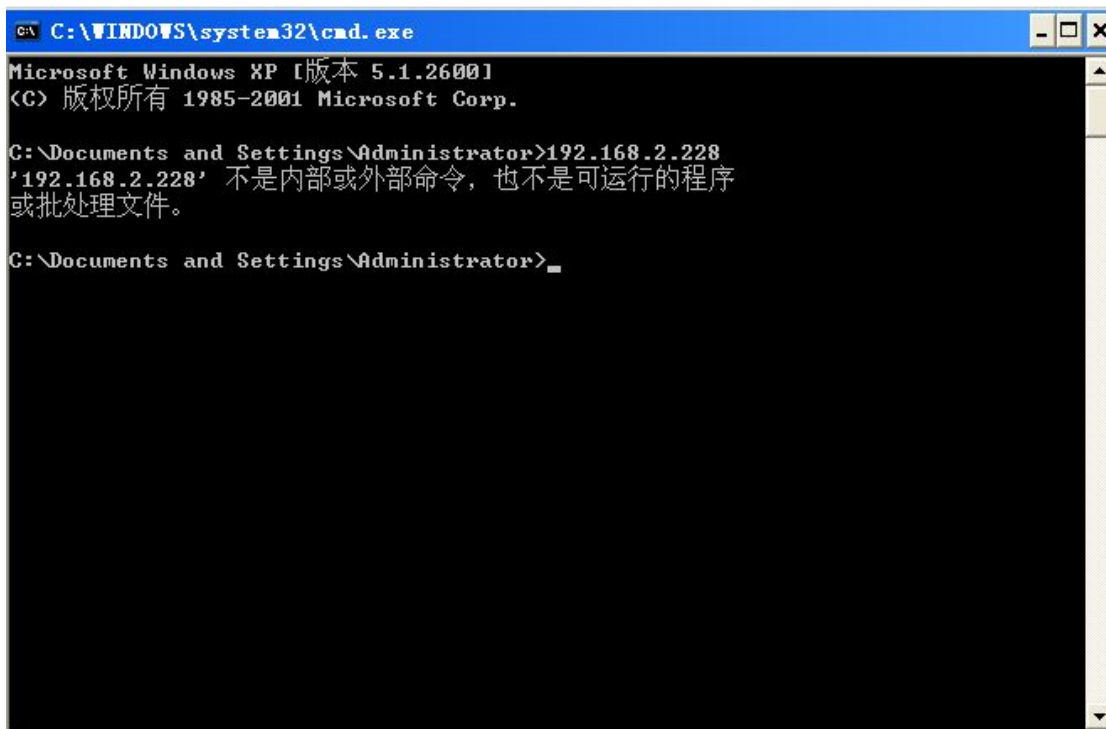

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [版本 5.1.2600]
(C) 版权所有 1985-2001 Microsoft Corp.

C:\Documents and Settings\Administrator>192.168.2.228
'192.168.2.228' 不是内部或外部命令, 也不是可运行的程序
或批处理文件。

C:\Documents and Settings\Administrator>_
```

4, If it shows ok, then it means the ip camera is ok.

If it shows not ok, then it means there's some problem with the ip camera or

The connection between ip camera and computer is not available.