


R-900A Medium speed dome camera alarm settings

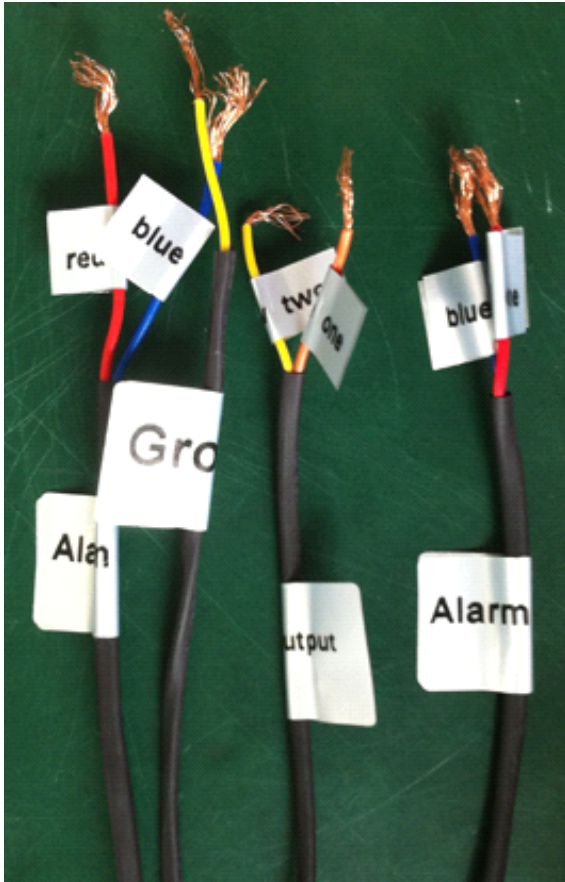

You will see the camera with alarm wires as below, each wire with a label of alarm input and output, just connect them to your alarm devices, You can see the labels marked one / two / three / four, these means they are alarm in 1...alarm in 4, the grounding wire is for all alarm input wires use together.

Connection:

Ground & alarm in 1 cables connect to Alarm Transmitter 1

Ground & alarm in 2 cables connect Alarm Transmitter 2

Ground & alarm in 3 cables connect Alarm Transmitter 3

Ground & alarm in 4 cables connect Alarm Transmitter 4

Alarm out + and alarm out – cables connect Alarm Receiver

And you need to operate its alarm function as follows:

Turn on / off alarm:

1. Turn on No. 1 alarm: SET preset of NO.181

2. Turn on No. 2 alarm: SET preset of NO.182

3. Turn on No. 3 alarm: SET preset of NO.183

4. Turn on No. 4 alarm: SET preset of NO.184

5. Clean all alarm: SET preset of NO. 40

(e.g. You set the door is always closed, and once it open, alarm device will send you voice, so when you open the door, alarm is triggered, now you can SET preset NO.40 to stop alarm, and alarm device will only works again when the door will be closed and opened again.)

6. Always closed or always opened switch: GO / RUN preset of NO.100

(e.g. This function is related to alarm devices, people sometimes will set alarm device to works only when the door be opened or be closed)