

Open housing of our speed dome camera


1. Put the PTZ on table stably, you can use the bulb in our packing carton to be the basis for PTZ, please refer to my picture



2. We need to take the bracket off, please take the screws off, refer to my picture, after you take off all screws on the bracket, you can easily take the bracket off.



3. Now we need to open the PTZ's housing, we need to take all screws (generally 4 pcs) off from the housing, refer to my pictures.

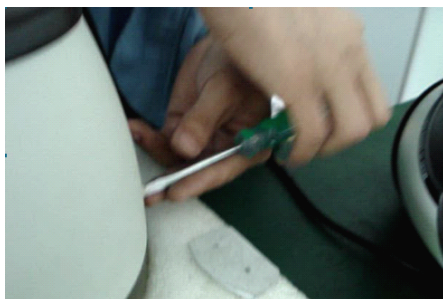

4. After you take off the PTZ's housing, you will see the decoder (main PCB board) on the top of ptz, but it is still connected to the housing via some wires, decoder is fixed by about 5 pcs screws.

